



Operating Instructions




J02069 Pok-It II Tool

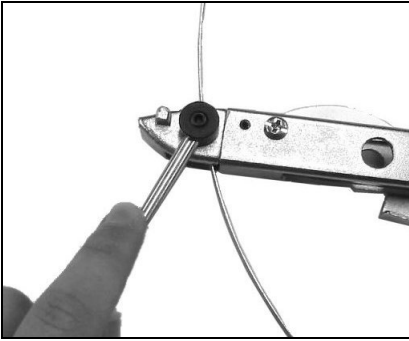

1. Cut off adequate band from roll of 1/4" or 3/8" BAND-IT band by opening the slot in the head of the tool with the cut off lever at right angles to the tool. Thread the band through the slot and cut.

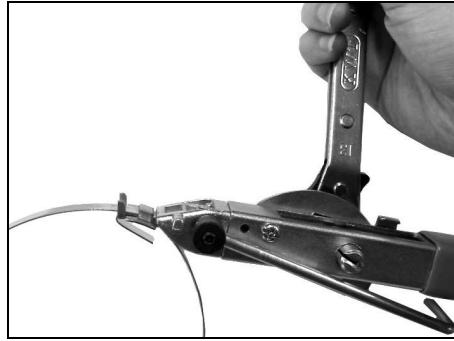


2. Form a clamp by threading the band through buckle and make a fold under the buckle. Insert tail of clamp into head of tool and slide into slot of winding mandrel. Depress locking pawl and tension clamp with forward strokes of the ratchet wrench.

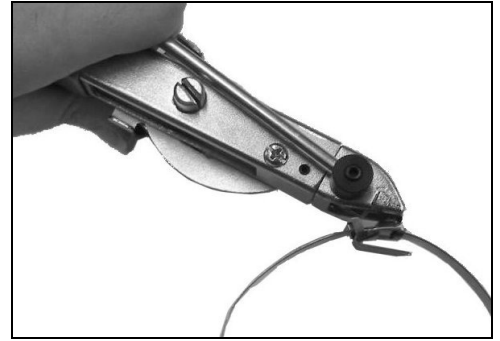

3. When sufficient tension has been applied, release locking pawl and rotate tool over object being clamped.

Note: For extra strength double-wrapped band is recommended.

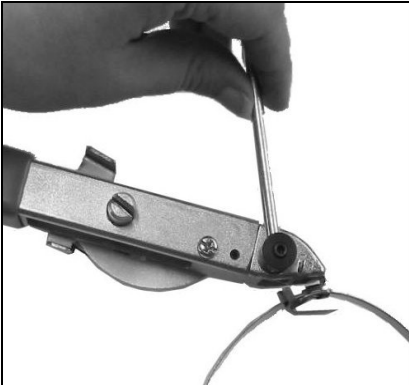

4. Cut off excess band by lifting cutter lever.



5. Complete clamping operation by tapping down ears of buckle with a hammer or mallet.



6. Remove band wrapped around winding mandrel by lifting up on locking pawl. Reverse ratchet and withdraw tensioning wrench from tool.

Jr. Preformed Clamps:




7. Insert tail of the preformed BAND-IT Jr. clamp into the tool. Tension as shown in steps 2 & 3. When tensioned sufficiently, release locking pawl and rotate over object being clamped. Cut off, leaving stub.



8. This stub should be shortened. With cutter in the open position, Place tool over stub, insert into slot and trim off excess.



9. Complete clamp by tapping lip of band over buckle and remove ratchet wrench from tool as shown in step 6.

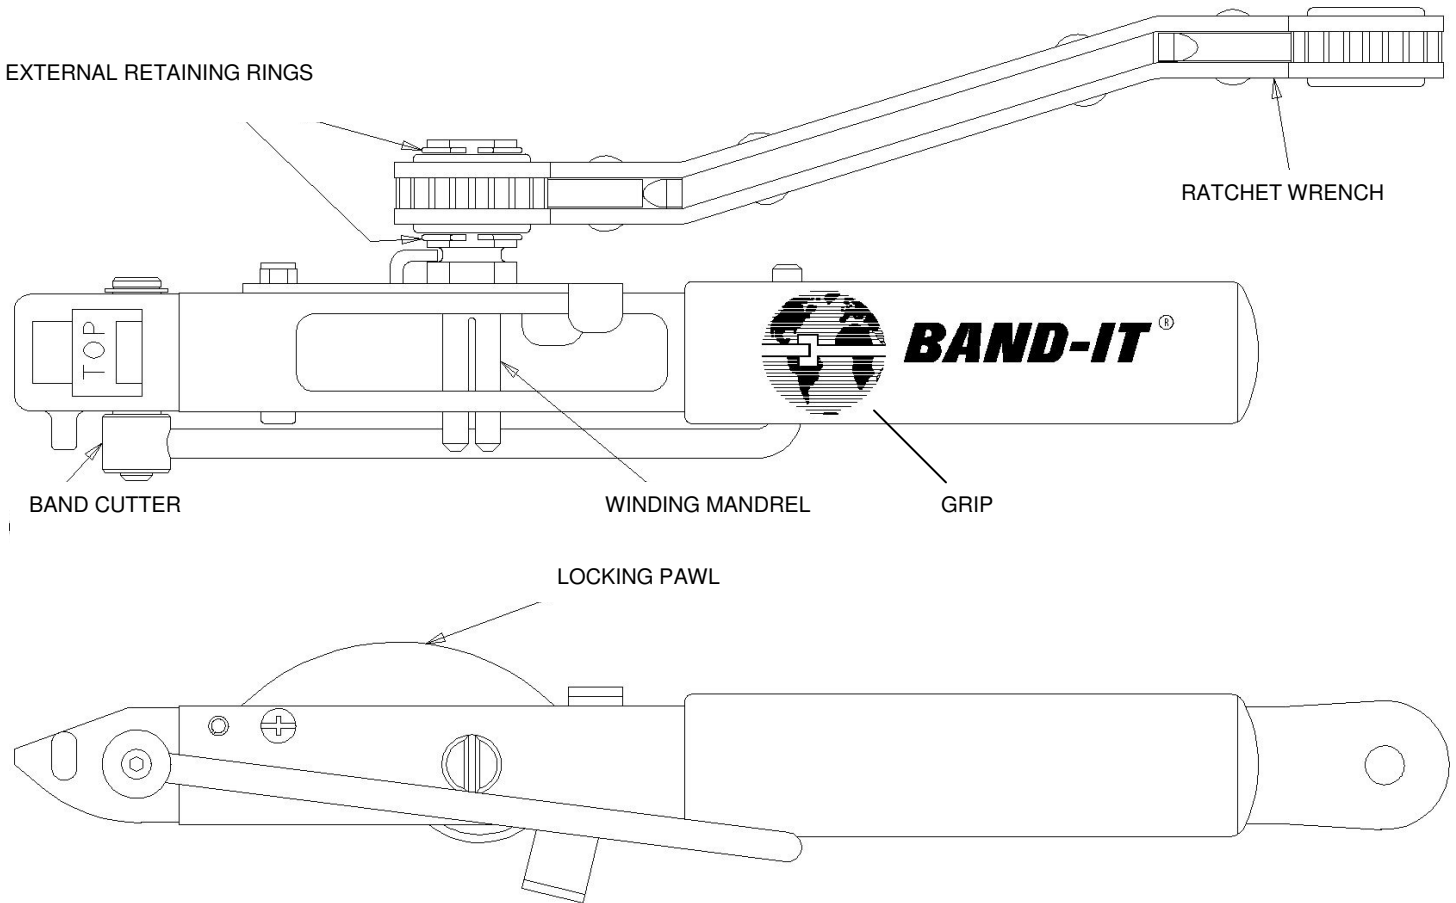

J020 POK-IT TOOL REPAIR PARTS LIST	
BAND-IT PART #	DESCRIPTION
J02786*	MANDREL ASSEMBLY WITH WRENCH INCLUDES: RATCHET WRENCH, WINDING MANDREL AND EXTERNAL RETAINING RINGS
J02587	GRIP
J02488	LOCKING PAWL
J01987	BAND CUTTER

* Repair part may appear different than illustrated.

Refer to website for warranty information: <http://www.band-it-idex.com/warranty.html>