


Instructions:

Wrap object with appropriate band and buckle. Place band through tool as shown. Ensure that lever block under the cut-off handle is in locked position. Hold the cut-off handle steady while leveraging the tension handle to desired tension. With tool still in tension, bend band back over the buckle. Place lever block in open position and pull cut-off handle up until band is cut.

Press the band down between the buckle ears and secure band with a hammer or mallet by pounding down buckle ears over remaining band tab to complete the clamp.

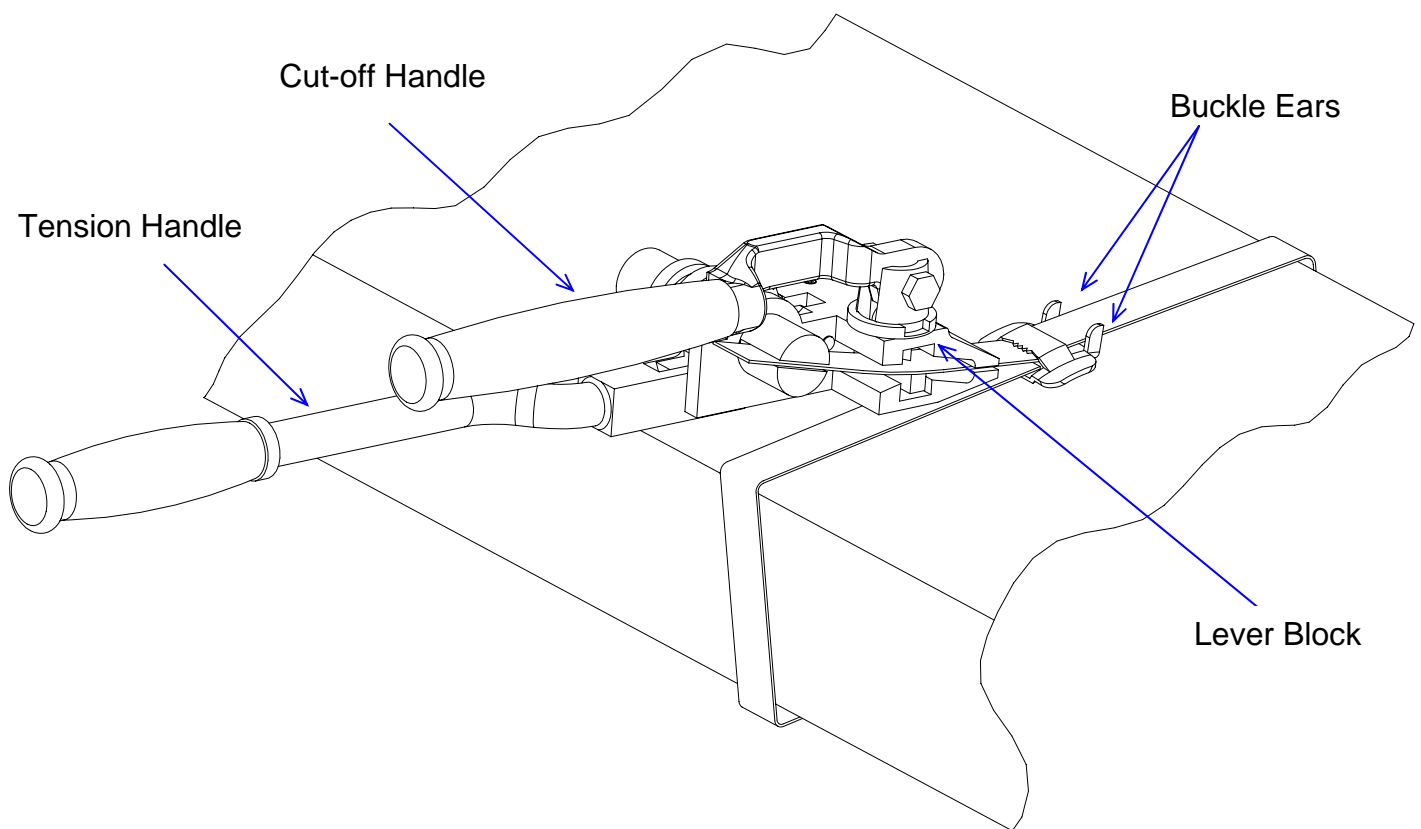

Refer to website for warranty information: <http://www.band-it-idex.com/warranty.html>