


### Introduction:

The S03869 Center Punch Tool installs BAND-IT 3/8" and 5/8", 201 Stainless Steel and Galvanized Carbon Steel clamps.

### Table of Contents:

1. Introduction & Safety Practices
2. Operating Instructions
3. Repair Parts List & Warranty

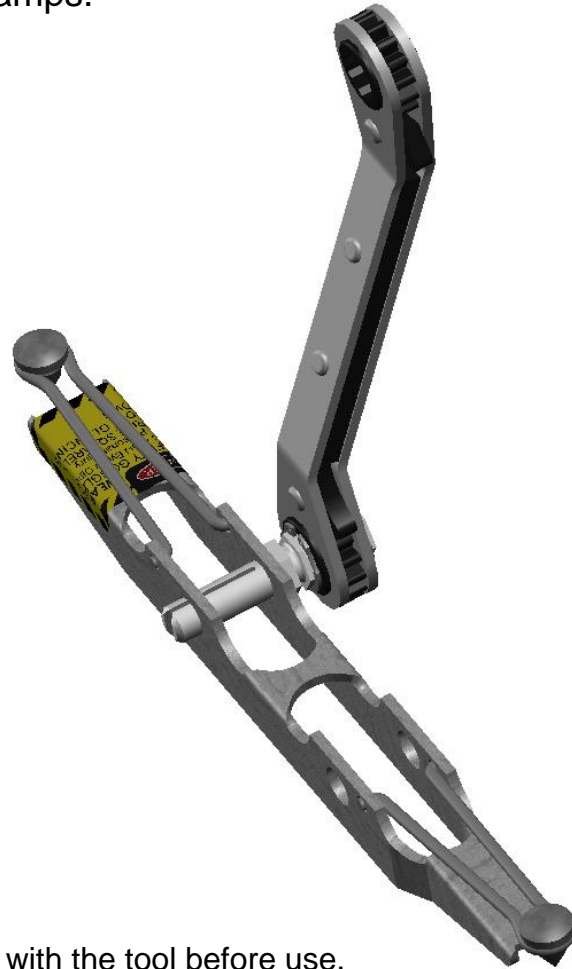

### Safety Practices:

1. Read this manual and become familiar with the tool before use.
2. Protective eyewear should be worn during use.
3. Wear appropriate gloves for handling steel.
4. When applying clamps, care should be taken to insure fingers are not in contact with the clamp during installation.
5. Never attempt to clamp objects which have the potential to burst, shatter or otherwise cause bodily harm.
6. Do not use tool on live electrical sources.


# Operating Instructions




## S03869 Center Punch Tool




**1.** Tool is designed specifically for 3/8" and 5/8" center punch clamps only. Insert clamp in tool's appropriate slot and insert wrench assembly. If you prefer, install wrench assembly before clamp is inserted. Slot must be aligned with clamp tail.

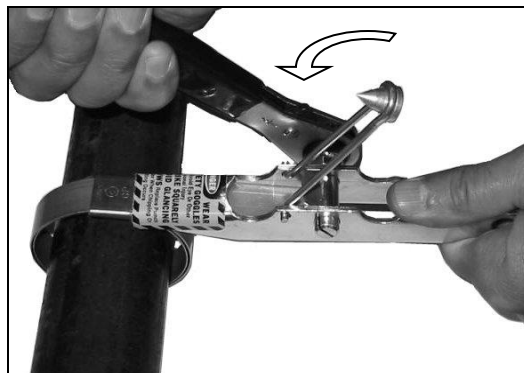


**2.** Start "pumping" ratchet wrench forward until proper tension has been applied.

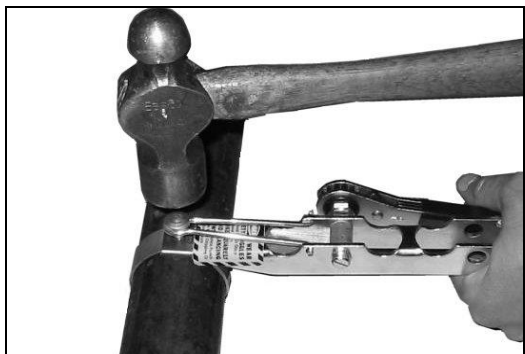

**3.** Place punch on clamp and, while holding tension with ratchet wrench, lock clamp by striking punch at least once. Varying blows may be required depending on object being clamped.

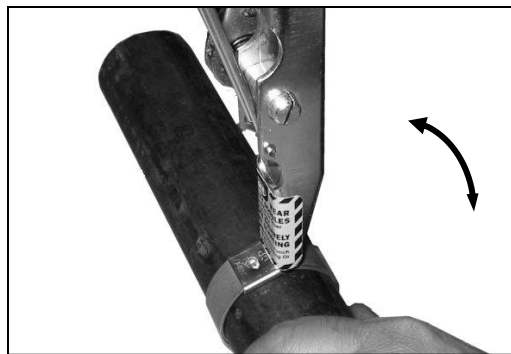

**4.** Still holding tension with wrench, pivot tool up against buckle, then backward several times to break off clamp tail.

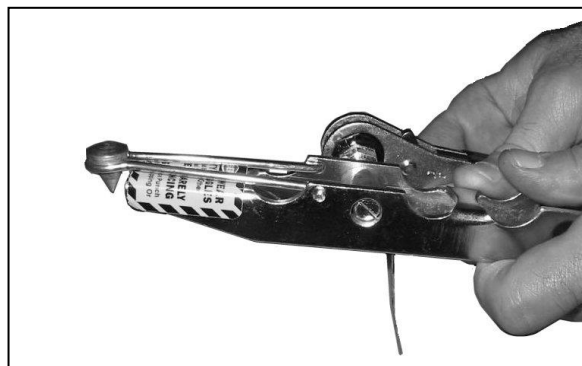

**5.** To loosen clamp tail, wind ratchet wrench until tail is free. Remove ratchet wrench assembly and clamp tail. *Caution: Clamp tail may spring back once released from tool nose.*

Refer to website for warranty information: <https://www.band-it-idex.com/terms-conditions/>